

## Safety

1. To prevent possible hearing damage, do not listen at high volume levels for long periods.

2. Risk of explosion if battery is replaced by an incorrect type, dispose of battery according to the instruction.

3. Recycle your products

The WEEE logo (shown at right) appears on the product to indicate that this product must not be disposed of or dumped with your other household wastes. You are liable to dispose of all your electronic or electrical waste equipment by transporting to an appropriate collection point for recycling of such hazardous waste.

**FCC Radiation Exposure Statement:** This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

### IC Warning:

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en

### IC Radiation Exposure Statement:

This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.



### FCC Notice

This device complies with Part 15 of FCC rules. Operation is subject to the following 2 conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## Warranty

Porta Phone items are warranted against defects in material and/or factory workmanship for a set period from the date of purchase. Standard repairs due to misuse or wear and tear, as well as replacement parts including but not limited to batteries, padding, USB cable, etc. are excluded. Shipping is to Porta Phone at customer's expense, Porta Phone will pay for return ground shipping if the product warranty applies to the repair. Call for details.

## Shipping

Prior to returning your headset for warranty or service you must call Porta Phone for an RA (Return Authorization) number: 1 (800) 233-1113

## General Service

All repair work will be performed for the cost of replacement parts and return shipping from the Porta Phone factory.

Service  
Porta Phone  
145 Dean Knauss Dr  
Narragansett RI 02882



**EXCELLENT  
PERFORMANCE**  
Effective range up to  
1/4 mile.

**LITHIUM  
BATTERIES**  
Provide continuous 4  
hr operation.

**Headset for  
Coach**



**Mini Speaker  
for Player**

# The CLIP

Coach to Player System



## Coach to Player

Included is one GOLD Headset labeled *MAIN*.



The Main Headset *MUST* be turned on *FIRST* to link Clips.

## GOLD Headset Operation

### Charge the Battery

- 1) Batteries are charged via the 2-port charger.
- 2) Insert the battery making sure the contacts are properly aligned.

### Installation

- 1) Press the release button located on the bottom of the battery compartment.
- 2) Insert the battery into the compartment (arrow indicates proper direction) and snap door closed.

### Low Indicator

A repetitive beep (every 20 seconds) indicates low power – battery should be charged or replaced.

### ON/OFF Power Button

- 1) Press the power button on the GOLD headset – flashing LED indicates power is ON.
- 2) The LED on all headsets/Clips will flash & then turn solid blue indicating items have linked.

Note) To turn off, press and hold the power button for 2 – 3 seconds. When LED turns red, release.



### Set Volume

GOLD series headsets feature 5 volume settings. Select the desired volume by slowly clicking the UP or DOWN buttons. Audible tone reflects volume level. Double tone indicates low or max volume.

### Microphone Placement

Position the microphone one-finger-width distance from your mouth.

Speak into the front of the microphone, indicated by painted arrow and "Talk".



## AutoMute Function



Boom swivels over the top 270 degrees. Headset can be worn on left or right ear.



Microphone mutes automatically when boom is set to "UP" position.

## CLIP Operation

### Charge the Battery

- 1) The CLIP has a built-in battery. Remove the CLIP from the neoprene cover before charging.
- 2) Insert into the multi-port charger making sure the contacts are properly aligned.



### Low Indicator

A repetitive beep (every 20 seconds) indicates low power – battery should be charged or replaced.


Each battery slot has a corresponding LED indicator:

RED: Charging  
GREEN: Fully Charged

Lithium Polymer battery operates 4 hours when fully charged.

### Powering ON

- 1) Ensure the GOLD Headset labeled MAIN is ON.
- 2) Power ON Remote Clips in any order.
- 3) Plug in lightweight headsets (if included).
- 4) Clip to clothing and set desired volume.

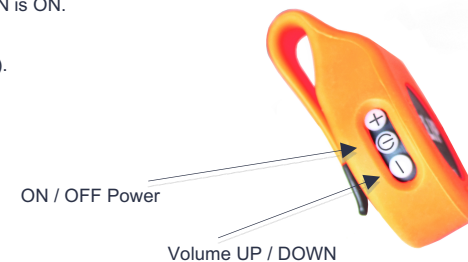

### Set Volume

The CLIP feature 5 volume settings. Select the desired volume by slowly clicking the UP or DOWN buttons. Audible tone reflects volume level. Double tone indicates low or max volume.

## Lightweight Headsets (Optional Add-On)

### Low profile Loop headset is available to fit The CLIP.

- 1) Plug into Clip for discreet listen-only operation.
- 2) Wrap the Earband behind ear.
- 3) Padded receiver sits over the ear canal.

