

IMPORTANT

The MAIN DBx Headset must be turned "ON" to link the corresponding **REMOTE headsets & Conference Module.**

Battery

Charging

- Insert the batteries into charger making sure the contacts are properly 1. aligned.
- 2. **RED: Charging; GREEN: Fully Charged.**

Installation

Slide battery compartment open, insert battery, click closed. 1.



Charger

Conference Module Battery



Operation

Module Startup / Shutdown

- Power ON the MAIN Headset, then REMOTE Headsets. 1.
- 2. Power ON Conference Module by rotating the ON/OFF/Volume dial clockwise. LED confirms power is on.
- 3. Shutdown: Rotate The Module on/off/vol dial until it clicks off. Press and hold power button on the DBx headsets for 4-5 seconds to turn off.

Note: Each time the conference module is turned on, the default setting will be Dual Channel Off/Def, 900 mHz.

Select Conference Mode

Each time The Conference Module is turned on the default setting will be dual channel Off/Def, 900 mHz. Pressing the green conference button connects the channels to link all headsets (LED turns red).

Select Frequency

Select 900 mHz or 2.4G. All headsets and the Conference Module should be on the same frequency.



Conference Module ON/OFF/Volume Dial

Separate / Combine Switch



Headset **Frequency Selection**



Module

Frequency Selection



Back A - Charge Jack G B - Battery Insert D А C - On / Off Dial D – Separate / Combine Switch E - Interlink Jack F - Headset Jack G - Belt Clip H - Frequency Button I - Programming Buttons B С

Interlink Option



Expand system - Interlink two Conference Modules.

- 1. Power ON both modules.
- Connect with HDMI cable via interlink jack. 2.
- 3. Press ONE Separate/Combine Switch.
- 4. Both LEDs will turn red, indicating Conference Mode.

The Conference Module