

Safety

1. To prevent possible hearing damage, do not listen at high volume levels for long periods.

Warranty

Porta Phone Co. items are warranted against defects in material and/or factory workmanship for a set period from the date of purchase. Standard repairs due to misuse or wear and tear, as well as replacement parts including but not limited to batteries, padding, USB cable, etc. are excluded. Shipping to Porta Phone Co. is at customer's expense, Porta Phone Co. will pay for return ground shipping if the product warranty applies to the repair. Call for details.

Shipping

Prior to returning your headset for warranty or service you must call Porta Phone Co. for an RA (return authorization) number: 1.800.233.1113.

General Service

All repair work will be performed for the cost of replacement parts and return shipping from the Porta Phone factory.

Service / Porta Phone Co.
145 Dean Knauss Drive
Narragansett, RI. 02882

www.portaphone.com


1.800.233.1113



The Lazer-Pro

Bone Conduction Headset

Lazer-Pro Bone Conduction Headset with Wireless Pairing

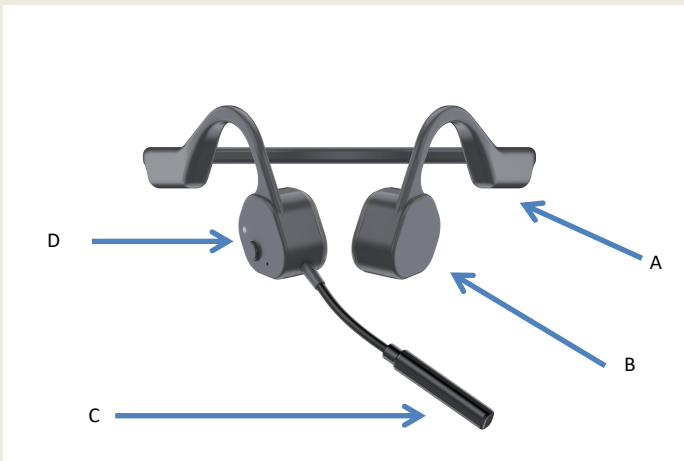

Power ON: Hold power button 3 seconds.
Power OFF: Hold power button 5 seconds.

A	Backband – Worn at the base of the head.
B	Charging Port – Plug charging cable here (incl.).
C	Microphone – Volume control buttons.
D	On/Off & Power button.

Pairing

- 1) The Lazer-Pro will seek wireless pairing automatically when turned on.
- 2) LED flashing red & blue indicates search mode. Solid blue LED indicates pairing is successful.
- 3) Once paired (even if turned off), Lazer-Pro will automatically find the last connected device.

Lazer-Pro Headset Instructions

Headset and Microphone Placement

For proper fit place receivers in front of ears to ensure clear bone conduction reception.



Noise cancelling mic eliminates background noise. Position closest to mouth.

Adjust volume +/- on microphone (C).

Charging

- 1) Plug USB A-Type into power source, micro USB into headset (B).
- 2) Red = Charging, Blue = Complete.
- 3) Charging time 1.5 hours - supports up to 8 hours of talk time.